

# Model Name: P650HVF01.0

Issue Date: 2012/8/15

(\*)Preliminary Specifications

( )Final Specifications

Customer Signature	Date	AUO	Date					
Approved By		Approval By PM Director  Paley Fang						
Note		Reviewed By RD Director  Eugene Chen  Reviewed By Project Leader  Mingyu Yu						



# **Contents**

No		
		CONTENTS
		RECORD OF REVISIONS
1		GENERAL DESCRIPTION
2		ABSOLUTE MAXIMUM RATINGS
3		ELECTRICAL SPECIFICATION
	3-1	POWER SPECIFICATIONS
	3-2	SIGNAL ELECTRICAL CHARACTERISTICS
	3-3	CONNECTOR
	3-4	HDMI CONNECTOR PIN ASSIGNMENT
	3-5	COLOR INPUT DATA REFERENCE
4		OPTICAL SPECIFICATION
5		MECHANICAL CHARACTERISTICS
6		RELIABILITY TEST ITEMS
7		PACKING
	7-1	DEFINITION OF LABEL
	7-2	PACKING METHODS
	7-3	PALLET AND SHIPMENT INFORMATION
8		PRECAUTION
	8-1	MOUNTING PRECAUTIONS
	8-2	OPERATING PRECAUTIONS
	8-3	ELECTROSTATIC DISCHARGE CONTROL
	8-4	PRECAUTIONS FOR STRONG LIGHT EXPOSURE
	8-5	STORAGE
	8-6	HANDLING PRECAUTIONS FOR PROTECT FILM



# **Record of Revision**

Version	Date	Page	Description
0.0	2012/8/15		First release



# 1. General Description

This specification applies to the 64.5 inch Integrated Transparent LCD Module, P650HVF01.0. This module consists of a TFT LCD panel, a metal frame and a driver board with shield cover. The Module has a TFT active matrix type liquid crystal panel with 1920 x 1080 pixels and displays up to 16.7M colors. The P650HVF01.0 has been designed to apply HDMI interface for easy use. It is intended to support applications such as shopping window, exhibition cabinet, vending machine, etc.

#### \* General Information

Items	Specification	Unit	Note
Active Screen Size	64.53	inch	
Display Area	1428.48 (H) x 803.52 (V)	mm	
Outline Dimension	1502.80(V) x 907.0(H) x 8.5(D)	mm	22.2 (Dmax)
Driver Element	a-Si TFT active matrix		
Display Colors	8 bit, 16.7M	Colors	
Number of Pixels	1920 x 1080	Pixel	
Pixel Pitch	0.744	mm	
Pixel Arrangement	RGB vertical stripe		
Display Operation Mode	Normally Black		
Surface Treatment	Anti-Glare, 3H		Haze 2%



# 2. Absolute Maximum Ratings

The followings are maximum values which, if exceeded, may cause faulty operation or damage to the unit


Item	Symbol	Min	Max	Unit	Conditions
Logic/LCD Drive Voltage	$V_{DD}$	-0.3	14	[Volt]	Note 1
Input Voltage of Signal	Vin	-0.3	4	[Volt]	Note 1
Operating Temperature	TOP	0	+50	[°C]	Note 2
Operating Humidity	HOP	10	90	[%RH]	Note 2
Storage Temperature	TST	-20	+60	[°C]	Note 2
Storage Humidity	HST	10	90	[%RH]	Note 2
Panel Surface Temperature	PST	-	65	[°C]	Note 3

Note 1: Duration:50 msec.

Note 2 : Maximum Wet-Bulb should be 39<sup>°</sup>C and No condensation.

The relative humidity must not exceed 90% non-condensing at temperatures of  $40^{\circ}$ C or less. At temperatures greater than  $40^{\circ}$ C, the wet bulb temperature must not exceed  $39^{\circ}$ C.

Note 3: Surface temperature is measured at 50°C Dry condition

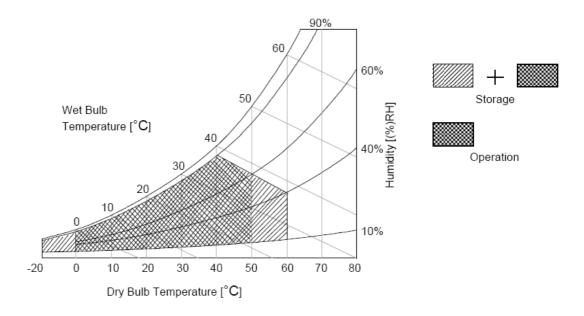



## 3. Electrical Specification

The P650HVF01.0 requires one power input. It is employed to power the LCD electronics and to drive the TFT array and liquid crystal.

### 3.1 Power Specifications

Input power specifications are as followings:

Symbol	Parameter	Min	Тур	Max	Unit	Conditions
VDD	LCD Drive Voltage	10.8	12.0	13.2	[Volt]	+/-10%
IDD	Input Current	_	0.8	0.96	[Δ]	VDD= 12.0V,All white
טטו	Imput Gurrent	_	0.6	0.90	[A]	Pattern, At 60Hz
DDD	VDD Dower		0.0	10.07	[\\/_++]	VDD= 12.0V,All white
PDD	VDD Power	-	9.6	12.67	[Watt]	Pattern, At 60Hz

### 3.2 Signal Electrical Characteristics

Input signals shall be HDMI.

It is recommended to refer the specifications of VESA in details.

#### 3.3 Connector

Physical interface is described as follows for the connector on module. These connectors are capable of accommodating the following signals and will be following components.

HDMI Connector	
Manufacturer	SINGATRON or compatible
Type Part Number	2HE.51U1.N08

DC Jack	
Manufacturer	菱揚精密有限公司 or compatible
Type Part Number	HF-DX-00330-AE100ASH1



## 3.4 HDMI Connector Pin Assignment

PIN#	NAME
1	HDMI2+
2	HDMI_WP
3	HDMI2-
4	HDMI1+
5	GND
6	HDMI1-
7	HDMI0+
8	GND
9	HDMI0-
10	HDMICK+
11	GND
12	HDMICK-
13	NC
14	GND
15	HDMI_SCL
16	HDMI_SDA
17	GND
18	HDMI_5V1
19	HP_DET_HDMI



### 3.5 Color Input Data Reference

The brightness of each primary color (red, green and blue) is based on the 8 bit gray scale data input for the color; the higher the binary input, the brighter the color. The table below provides a reference for color versus data input.

### **Color Data Reference**


										I	npu	t Cc	olor I	Data	a										
	Color				RI	ΞD					GREEN							BLUE							
	00101	MS	В					LS	SB	MS	В					LS	B	MS	В					LS	3B
		R7	R6	R5	R4	R3	R2	R1	R0	G7	G6	G5	G4	G3	G2	G1	G0	B7	B6	B5	B4	ВЗ	B2	B1	B0
	Black	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
	Red(255)	1	1	1	1	1	1	1	1	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
	Green(255)	0	0	0	0	0	0	0	0	1	1	1	1	1	1	1	1	0	0	0	0	0	0	0	0
Basic	Blue(255)	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	1	1	1	1	1	1	1	1
Color	Cyan	0	0	0	0	0	0	0	0	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
	Magenta	1	1	1	1	1	1	1	1	0	0	0	0	0	0	0	0	1	1	1	1	1	1	1	1
	Yellow	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	0	0	0	0	0	0	0	0
	White	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
	RED(000)	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
	RED(001)	0	0	0	0	0	0	0	1	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
R																									
	RED(254)	1	1	1	1	1	1	1	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
	RED(255)	1	1	1	1	1	1	1	1	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
	GREEN(000)	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
	GREEN(001)	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	1	0	0	0	0	0	0	0	0
G																									
	GREEN(254)	0	0	0	0	0	0	0	0	1	1	1	1	1	1	1	0	0	0	0	0	0	0	0	0
	GREEN(255)	0	0	0	0	0	0	0	0	1	1	1	1	1	1	1	1	0	0	0	0	0	0	0	0
	BLUE(000)	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
	BLUE(001)	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	1
В																9000000000									
	BLUE(254)	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	1	1	1	1	1	1	1	0
	BLUE(255)	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	1	1	1	1	1	1	1	1



# 4. Optical Specification

Optical characteristics are determined after the unit has been 'ON' and stable for approximately 45 minutes in a dark environment at 25 °C. The values specified are at an approximate distance 50cm from the LCD surface at a viewing angle of  $\phi$  and  $\theta$  equal to  $0^{\circ}$ .

Fig.1 presents additional information concerning the measurement equipment and method.

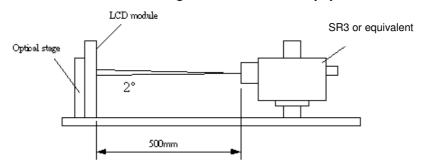

Parameter	Currente e l		Values	l lmit	Notes	
Parameter	Symbol	Min.	Тур.	Max	Unit	notes
Contrast Ratio	CR	3200	4000			1, 2
Surface Luminance (White)	Lwн		360		cd/m <sub>2</sub>	1, 2
Response Time (G to G)	Тү		8		Ms	3
Color Gamut	NTSC		72		%	
Color Coordinates						
Red	R <sub>X</sub>		0.630			
	$R_Y$		0.330			
Green	G <sub>X</sub>		0.320			
	$G_Y$	Turo 0.00	0.620	Tura . 0.00		
Blue	B <sub>X</sub>	Тур0.03	0.150	Typ.+0.03		
	B <sub>Y</sub>		0.040			
White	W <sub>X</sub>		0.280			
	$W_Y$		0.290			
Viewing Angle						4
x axis, right(φ=0°)	$\theta_{\rm r}$		89		degree	
x axis, left(φ=180°)	θι		89		degree	
y axis, up(φ=90°)	$\theta_{u}$		89		degree	
y axis, down (φ=270°)	$\theta_{\sf d}$		89		degree	
x axis, left + right	$\theta_{l} + \theta_{r}$			100	degree	5



#### Note:

- 1. The typical values of contrast ratio, surface luminance, and color chromaticity are based on the average value of DVT samples with P650HVN02.2 backlight. Light source for this Integrated Transparent LCD Module is designed by customers; AUO can not guarantee the typical value of NTSC, RGBW, contrast ratio, luminance, and maximum value of luminance variation due to customers' light source design.
- 2. Contrast Ratio (CR) is defined mathematically as:


$$\label{eq:contrast} \begin{aligned} & \text{Surface Luminance of $L_{on5}$} \\ & \text{Contrast Ratio=} \\ & \\ & \text{Surface Luminance of $L_{off5}$} \end{aligned}$$


3. Response time  $T_{\gamma}$  is the average time required for display transition by switching the input signal for five luminance ratio (0%,25%,50%,75%,100% brightness matrix) and is based on  $F_v$ =60Hz to optimize. From more information see FIG 3.

Me	easured			Target		
Resp	onse Time	0%	25%	50%	75%	100%
	0%		0% to 25%	0% to 50%	0% to 75%	0% to 100%
	25%	25% to 0%		25% to 50%	25% to 75%	25% to 100%
Start	50%	50% to 0%	50% to 25%		50% to 75%	50% to 100%
	75%	75% to 0%	75% to 25%	75% to 50%		75% to 100%
	100%	100% to 0%	100% to 25%	100% to 50%	100% to 75%	

- 4. Viewing angle is the angle at which the contrast ratio is greater than 10. The angles are determined for the horizontal or x axis and the vertical or y axis with respect to the z axis which is normal to the LCD surface. For more information see FIG4.
- 5. head in 0 degrees vertical angle from mid axis

#### FIG. 2 Luminance

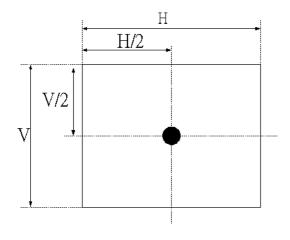


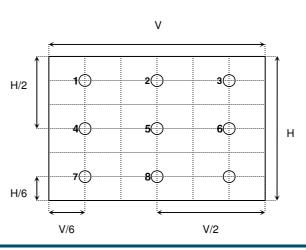




#### FIG.3 Response Time

The response time is defined as the following figure and shall be measured by switching the input signal for "any level of grey(bright) " and "any level of gray(dark)".

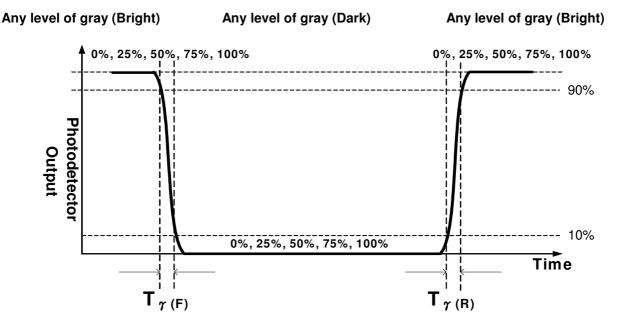

### FIG.4 Viewing Angle

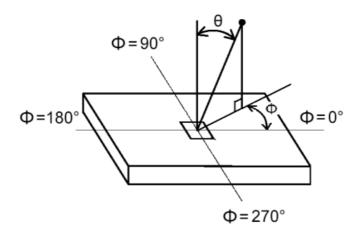




### 5. Mechanical Characteristics

The contents provide general mechanical characteristics for the model P650HVF01.0. In addition the figures in the next page are detailed mechanical drawing of the LCD.


	Horizontal	1502.8mm	
0 11 51	Vertical	907.0mm	
Outline Dimension	Depth	8.5mm (thinnest)	
D. al Caraina	Horizontal	1438.8mm	
Bezel Opening	Vertical	816mm	
Active Display Area	Horizontal	142848mm	
Active Display Area	Vertical	803.52 mm	
Weight	10.000 g (Typ.)		
Surface Treatment	AG, 3H		



## **Front View**

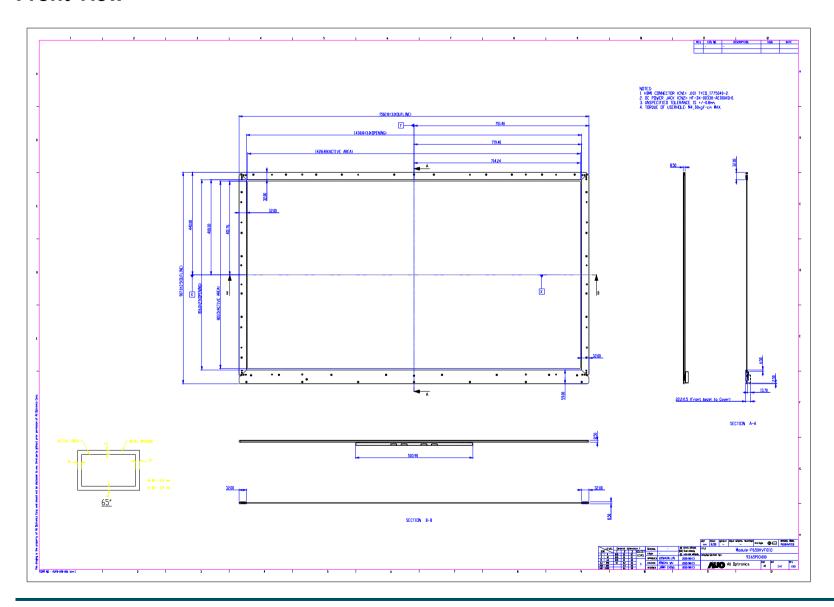




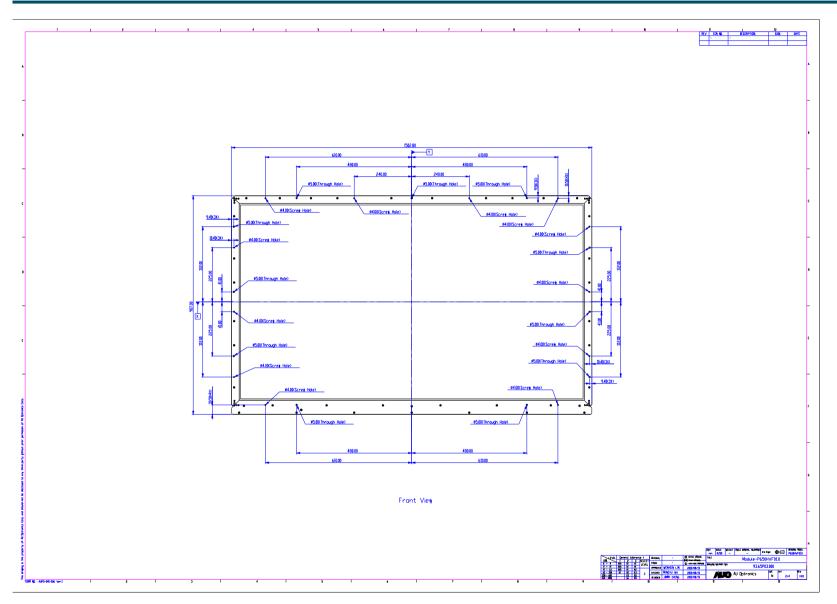



## **Back View**

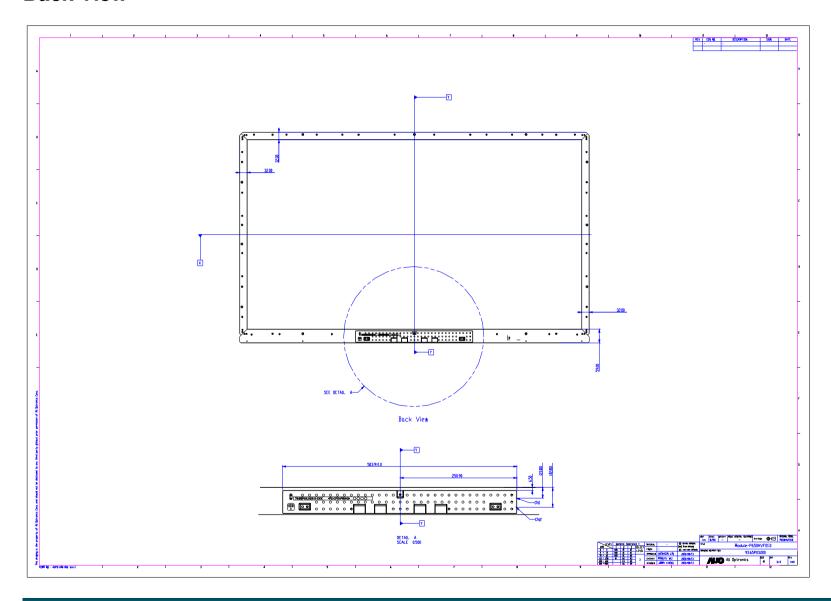




# 6. Reliability Test Items

	Test Item	Q'ty	Condition
1	High temperature storage test	3	60°C, 300hrs
2	Low temperature storage test	3	-20℃ , 300hrs
3	High temperature operation test	3	50℃, 300hrs
4	Low temperature operation test	3	-5℃, 300hrs
5	Vibration test (With carton)	1 (PKG)	Random wave (1.05G RMS, 10-200Hz) 10mins/ Per each X,Y,Z axes
6	Drop test (With carton)	1 (PKG)	Height: 25.4 cm Direction: Only bottom flat twice (ASTMD4169-I)




# 7. Packing

# 

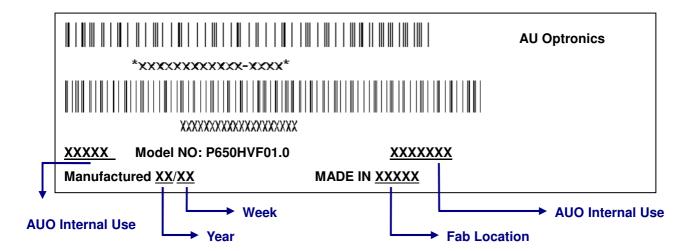


### **B. Carton Label:**

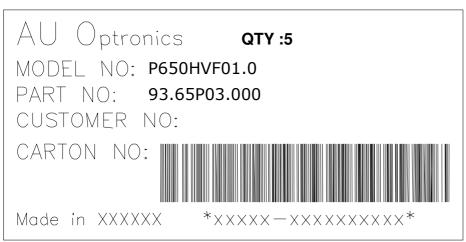



## 7.2 Packing Methods:

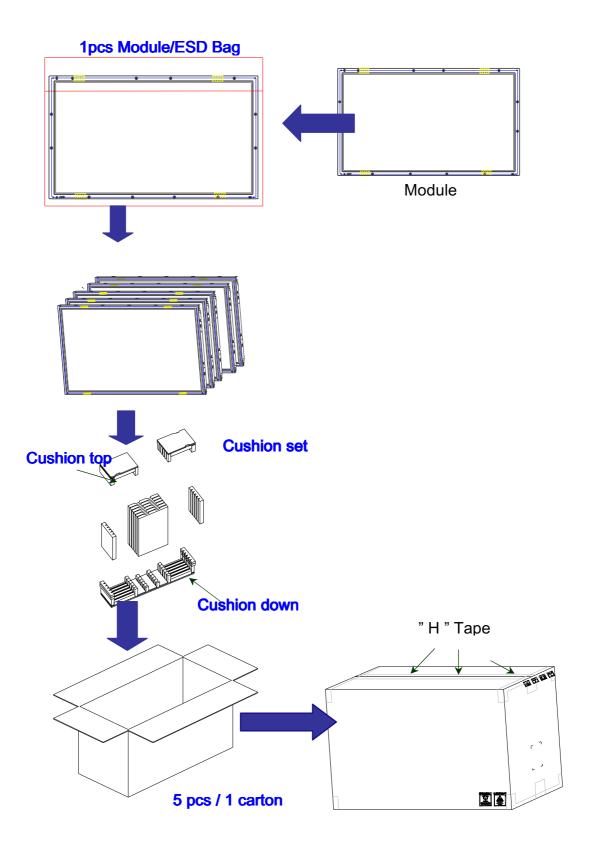



## 7.3 Pallet and Shipment Information

		Specification			Packing		
	Item	Qty.	Dimension	Weight (kg)	Remark		
1	Packing Box	5 pcs/box	1605(L)mm*375(W)mm*1025(H)mm	70			
2	Pallet	1	1660(L)mm*1150(W)mm*144(H)mm	20			
3	Boxes per Pallet	3 boxes/Pal	3 boxes/Pallet (By Air); 3 Boxes/Pallet (By Sea)				
4	Panels per Pallet	15 pcs/palle					
5	Pallet	15 (by Air)	1660(L)mm*1150(W)mm*1169(H)mm	230(by Air)			
	after packing 30 (by Sea		1660(L)mm*1150(W)mm*2338(H)mm	460(by Sea)	40ft HQ		



### 8. PRECAUTIONS

Please pay attention to the followings when you use this Integrated Transparent LCD Module.

#### 8.1 MOUNTING PRECAUTIONS

- (1) You must mount a module using holes arranged in four corners or four sides.
- (2) You should consider the mounting structure so that uneven force (ex. twisted stress) is not applied to module. And the case on which a module is mounted should have sufficient strength so that external force is not transmitted directly to the module.
- (3) Please attach the surface transparent protective plate to the surface in order to protect the polarizer. Transparent protective plate should have sufficient strength in order to the resist external force.
- (4) You should adopt radiation structure to satisfy the temperature specification.
- (5) Acetic acid type and chlorine type materials for the cover case are not desirable because the former generates corrosive gas of attacking the polarizer at high temperature and the latter cause circuit broken by electro-chemical reaction.
- (6) Do not touch, push or rub the exposed polarizer with glass, tweezers or anything harder than HB pencil lead. And please do not rub with dust clothes with chemical treatment. Do not touch the surface of polarizer for bare hand or greasy cloth. (Some cosmetics are detrimental to the polarizer.)
- (7) When the surface becomes dusty, please wipe gently with absorbent cotton or other soft materials like chamois soaks with petroleum benzene. Normal-hexane is recommended for cleaning the adhesives used to attach front/ rear polarizer. Do not use acetone, toluene and alcohol because they cause chemical damage to the polarizer.
- (8) Wipe off saliva or water drops as soon as possible. Their long time contact with polarizer causes deformations and color fading.
- (9) Do not open the case because inside circuits do not have sufficient strength.

#### **8.2 OPERATING PRECAUTIONS**

- (1) The device listed in the product specification sheets was designed and manufactured for PID application
- (2) The spike noise causes the mis-operation of circuits. It should be lower than following voltage: V=±200mV(Over and under shoot voltage)
- (3) Response time depends on the temperature. (In lower temperature, it becomes longer..)
- (4) Brightness of LED depends on the temperature. (In lower temperature, it becomes lower.) And in lower temperature, response time (required time that brightness is stable after turned on) becomes longer.
- (5) Be careful for condensation at sudden temperature change. Condensation makes damage to polarizer or electrical contacted parts. And after fading condensation, smear or spot will occur.
- (6) When fixed patterns are displayed for a long time, remnant image is likely to occur.
- (7) Module has high frequency circuits. Sufficient suppression to the electromagnetic interference shall



be done by system manufacturers. Grounding and shielding methods may be important to minimize the interface.

#### 8.3 ELECTROSTATIC DISCHARGE CONTROL

Since a module is composed of electronic circuits, it is not strong to electrostatic discharge. Make certain that treatment persons are connected to ground through wristband etc. And don't touch interface pin directly.

#### **8.4 PRECAUTIONS FOR STRONG LIGHT EXPOSURE**

Strong light exposure causes degradation of polarizer and color filter.

#### 8.5 STORAGE

When storing modules as spares for a long time, the following precautions are necessary.

- (1) Store them in a dark place. Do not expose the module to sunlight or fluorescent light. Keep the temperature between 5°C and 35°C at normal humidity.
- (2) The polarizer surface should not come in contact with any other object. It is recommended that they be stored in the container in which they were shipped.

### 8.6 HANDLING PRECAUTIONS FOR PROTECTION FILM

- (1) The protection film is attached to the bezel with a small masking tape. When the protection film is peeled off, static electricity is generated between the film and polarizer. This should be peeled off slowly and carefully by people who are electrically grounded and with well ion-blown equipment or in such a condition, etc.
- (2) When the module with protection film attached is stored for a long time, sometimes there remains a very small amount of glue still on the bezel after the protection film is peeled off.
- (3) You can remove the glue easily. When the glue remains on the bezel or its vestige is recognized, please wipe them off with absorbent cotton waste or other soft material like chamois soaked with normal-hexane.